

DX460 Cartridge Hammer

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment. This leaflet is not a substitute for a properly executed risk assessment.



It is important to read all of this leaflet BEFORE you use the DX460 Cartridge Hammer

- Plan your work and think ahead to make sure you will always be working safely.
- Powder actuated hammers can be hazardous if misused. They should be used carefully and only by trained personnel.
- The noise levels produced by this equipment can damage your hearing.
- You should have attended a recognised training course before you can use the DX460.
- The Hillt DX460 is designed to fix a variety of materials to concrete, masonry and steel using the appropriate fasteners.
- The action of the DX460 can cause injury or damage if it is not used in a correct, careful and controlled way.
- If it has been some time since you used the Hillt DX460, familiarise yourself with it again and with the safety requirements before you start work.
- You must wear the following items of personal protective equipment: ear muffs or plugs giving protection for levels up to 108 dB(A); impact resistant goggles; EN166 – B or BS2092 grade 1; dust mask – at a minimum of EN149:2001 FFP3 protection; safety boots (EN345 or BS1870:4972); safety helmet – EN397 or BS3240; gloves.
- This Hillt Hillt DX460 must not be used by minors, or by anyone under the influence of drugs or alcohol.
- Cartridge hammers are designed for operation by an able-bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using them.



Every user of this equipment should read the information given in this document and accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

HAE
Hire Association Europe
2450 Regents Court
The Crescent
Barnet Business Park
Southill B57 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
Website: www.hae.org.uk

- SAFETY REQUIREMENTS**
 - Before you can use the Hillt DX460: You must be over 18 years old; You must have attended a recognised training course. You need normal colour vision to recognize the different colour and strength of cartridges; You must be aware that the Hillt DX460 can produce noise levels up to 108 dB(A), which can seriously damage your hearing.
- WORK AREA**
 - Only essential people should work in the area when the DX460 is being used. Definitely no children.
 - Do not use the DX460 where there is a danger of explosion. It will ignite fumes from petrol or gas cylinders.
 - Make sure that your work area is clear and safe and that no-one is near to you or could distract you.
 - Protect other people from the noise and danger. Warn others to keep away. You may need to put barriers around your work area.
- OPERATORS**
 - Do not use this tool if you feel unwell or if you are unable to concentrate on the task in hand.
 - Do not use this tool from an awkward or uncomfortable position. Find a way to get into a suitable position before working.
 - The following items of personal protective equipment (ppe) are the minimum that should be worn whenever you use the Hillt DX460. Particular jobs or environments may require a higher level of protection.
 - This DX460 will cause noise levels up to 108 dB(A) – wear appropriate ear muffs or plugs giving hearing protection for this level as a minimum. You must wear impact resistant goggles (EN166 – B or BS2092 grade 1) when you are working with this equipment.
 - You must wear safety boots (EN 345 or BS1870/4972).
 - Wear a helmet (EN397 or BS240) when working with the cartridge hammer.
 - Strong gloves will help protect your hands.
 - Anybody who is working near to you will also need to wear appropriate personal protective equipment.
- HILLT DX460**
 - Check your cartridge hammer, cartridges and fasteners. Do not use anything found damaged – contact the hire company.
 - Do not load the DX460 until it is required for immediate use. It should remain unloaded and put safely away when not in use.
 - The DX460 will operate as a single fastener tool; or can be fitted with a magazine (see loading).
 - To guard against accidental firing, the Hillt DX460 will not fire until: first – the

Using the DX460 Cartridge Hammer

- Wear your protective equipment including ear defenders and goggles. Use both hands to hold and fire the cartridge hammer.
- Do not include in any horsplay or irresponsible behavior, while using or working near the cartridge hammer.
- Never carry cartridges loose in a pocket. Do not carry them loose in a box with metal fasteners.
- Do not carry a loaded hammer from place to place.
- Do not use the DX460 on brittle surfaces, like glass, marble, plastics, bronze, brass, glazes, tiles, hollow brick or cast steel, they will crack or shatter.
- Do not use this tool on plasterboard or partitioning. Use it only on structural steel, masonry or similar material. Do not use it on modern housebricks, they will shatter.
- Do not try to use an existing hole in the material you are fastening. Always move to a new position.

Please store this leaflet safely. It may be required for further information

HAH
Hire Association Europe
2450 Regents Court
The Crescent
Barnet Business Park
Southill B57 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
Website: www.hae.org.uk

- Do not try to use on top of old or broken fasteners. It could cause distortion or miss location. It could be dangerous.
- As a safety measure the hammer will not fire until the muzzle is pressed home against the workpiece before pulling the trigger.
- Clean and lubricate this hammer regularly.
- After approximately 3000 fixings the Hillt DX460 should be returned to the hire company for thorough cleaning and servicing.
- When you have finished work, unload and clean the cartridge hammer and store it and the cartridge securely.
- If your equipment is faulty, do not attempt to repair it. Contact the hire company.
- You may want to read this leaflet again. Please keep it until you finish work.

Before Starting Work...



muzzle is depressed against the workpiece, second – the trigger is pulled, while the muzzle remains depressed. The DX460 will not fire if the trigger is pulled before depressing the muzzle.

Do not deliberately pull back the muzzle (or magazine if fitted) of a loaded tool; this removes the safety device and will allow the tool to fire when trigger is pressed.

Cartridges must be stored in a locked metal box.

Do not point the DX460 at anyone, even when it is not loaded. Get into the habit of not pointing it at people.

Never point the barrel at any part of your body at any time.

You must always unload the DX460 before cleaning or changing parts or when finished work. TAKE CARE the tool gets very hot in use.

The DX460 has a standard piston for normal application. It is also available with several special purpose pistons for different applications – do not use a different fastener until you have checked with the hire company.

Before you start work, make sure you understand how to use the DX460

POWER REGULATION WHEEL WITH LOCKING FUNCTION

- Start with the lowest power cartridge and tool set at the lowest power setting.
- Press the release button.
- Turn the power regulation wheel to 1.
- Give a nail.
- If the fastener doesn't penetrate deeply and repeat steps two to four.
- Repeat these steps until the desired depth of penetration is reached. Use a more powerful cartridge if necessary.

ACCESSORIES

- There are many accessories available for the DX460 including several piston types, and many different fasteners. Check with the hire company.
- Always, before use and after use, check there is no cartridge in the tool.
- Always ensure that your cartridges and fasteners are suitable for the tool and the job.

CARTRIDGE HAMMER SAFETY

- Always, before use and after use, check there is no cartridge in the tool.
- Always ensure that your cartridges and fasteners are suitable for the tool and the job.

OPERATION SINGLE FASTENER TOOL

- Insert the fastener (read first) until the washer is held in the tool.
- Load the cartridge strip (narrow end first) by inserting it into the bottom of the tool grip until flush.
- If a strip has been partly used, pull it through until a live cartridge is in the chamber. The last visible number on the back of the cartridge strip indicates which cartridge is next to be fired.

Unloading

- Remove the cartridge strip by pulling it upwards out of the tool.
- Remove the fastener from the fastener guide.

Fastening

- Press the tool firmly against the work surface at right angles.
- Fire the tool by pulling the trigger.
- Do not try to fasten in an existing hole.
- Do not try to re-drive the same fastener twice (i.e. after a failed cartridge).
- Do not exceed the maximum fastener-driving rate.

MAGAZINE TOOL

- Release the magazine cover by pressing the release button.
- Pull the magazine cover down as far as it will go.
- Load a new nail strip into the magazine.

- Push the magazine cover down until it snaps closed.
- Load the cartridge strip (narrow end first) by inserting it into the bottom of the tool grip until flush.
- If a strip has been partly used, pull it through until a live cartridge is in the chamber. The last visible number on the back of the cartridge strip indicates which cartridge is next to be fired.
- When the indicator shows (in view of the side of the tool) that there are one or two live cartridges in the magazine must be the same length.

Unloading

- Remove the cartridge strip by pulling it upwards out of the tool.
- Release magazine cover by pressing the release button.
- Pull the magazine cover down as far as it will go.
- Remove any nail strip from the magazine.
- Push the magazine cover down until it snaps closed.

Fastening

- Press the tool firmly against the work surface at right angles.
- Fire the tool by pulling the trigger.
- Do not try to fasten in an existing hole.