

Betore Starting Work.

AAHA XHOW

- from petrol, or gas cylinders. danger of explosion. It will ignite fumes Do not use this breaker where there is a
- and that no-one is nearby who could cause Make sure that the area is clear and safe ·7
- Protect other people from the holse, debris UODOBIISID P
- barriers around the work area. and dust. Warn others to keep away, put
- ables, gas or water pipes where the work Check that there are no buried electric
- surfaces or objects that may be damaged, amount of dust and depris, cover any ριεσκιυά ριιςκ συα μσεουιλ μσκεε σ ισιδε ·c is peing carried out.

SROTAR390

or difficult to clean.

- used. Particular jobs or environments may should be worn whenever this machine is aduipment (ppe) are the minimum that The following items of personal protective 1
- Impact resistant goggles must be worn require a higher level of protection.
- .5 when using this machine.
- muffs or plugs giving protection up to this levels up to 102 dB(A) – appropriate ear This equipment is likely to cause noise
- An appropriate dust mask is required when . 12 .muminim & 26 mow ed 120m level
- breaking material that causes dust.
- Safety boots must be worn
- Anybody working nearby will also need to
- wear personal protective equipment. .9

3YT TEB Iludilos

The Crescent Birmingham Business Park มกอา รมมอติอม กระว Association Europe

:lism3

.9

.4

·7

-1

company.

ВВЕАКЕВ

is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments

have the force of law and only the courts can authoritatively interpret the law.

v.hae.org.u^k ku.pro.esd@lism :euoudeie

down, on floors or roads.

two hands while working.

44 (0) 121 333 4109 44 (0) 121 380 4600

preaker on it must be known how to stop it. icu oberates - betore switching the Operators should check how the on/off

This breaker must only be used pointing

worn to keep hands warm whilst working.

ρειοιε ειαιτιτία work, and gloves should be

hazardous. Hands should be warmed up

Vibration from using this breaker can be

The breaker should always be gripped with

230v mains will have either a normal square

Machines designed to run directly from

neavier than it looks and could cause injury.

be taken when moving it as it may be

transformer has been supplied, care must

normal mains 230v supply. It a portable

provided a portable transformer if the

110v supply. The hire company will have

plug fitted are designed to run off a special

Machines with a cylindrical yellow industrial

matches the available supply. Connections

Check that the plug on the machine

do not use the breaker - contact the hire

pits. It anything is tound to be damaged,

Check the machine, cables, plugs and tool

must not be forced or improvised.

machine needs to be powered from

pin ping med, or a blue industrial plug.











e.org.uk www.hae.org.uk

transformer and the machine.

than 50 metres (160 teet).

fiven any special instruction,

given by the hire company. If

rollow any special instructions

not use any 230v extension cables.

110 VOLT MACHINES (YELLOW PLUG)

Read the instructions below for the machine

square pin plug fitted, or a blue industrial plug.

Titted. 230v machines will have either a normal

110v machines will have a yellow industrial plug

The machine will only operate on one voltage; it

breaker must be used. No other tool bits

Only the correct tool bits specifically for this

The tool shank should be clean and lightly

oiled before insertion into the breaker.

1. Switch the breaker off, and unplug it before

2. If an extension cable is needed,

will be 110v or 230v.

ELECTRICAL SAFETY

31

.s

1001 BITS

suoniq pe used.

changing the tool bit.

the hire company have

must only be used between

extension cable should be used, not longer

only a suitably rated heavy duty 110v

transformer directly into the 230v socket. Do

1. If using a portable transformer, plug the

lou

The extension



©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

Hiro Association Euro 2450 Regents Court The C

lihull B37 7YE

and safe.

JU JOVEL IL.

ามมมพ

SOCKEL.

gevice

and sale.

OVER IL.

and could catch fire.

Hung it airectly into the rea.

than 50 meters (160 feet).

should be used, not longer

needed, only a suitable rated heavy duty cable

3. If an extension cable is

machine get damaged.

directly in to the

230 VOLT MACHINES

1. Use a residual current

(зольяе ріи оя віле ріла)

overheat and could catch fire.

into the rcd. This will help to

Plug the machine

(Lca) binddea

4. Extension cable connections must be kept dry

rrapped, and places where vehicles might run

doorways or windows where it might be

carefully, avoiding liquids, sharp edges, 3. The extension cable should be laid out

It should be fully unrolled or it will

2. Extension cable connections must be kept dry

It should be fully unrolled or it will overheat

trapped, and places where vehicles might run

doorways or windows where it might be

arefully avoiding liquids, sharp edges,

h

4. The extension cable should be laid out

the rcd according to the instructions supplied

vorking each time the machine is used. Rese

protect against electric shock if the cable or

230^

2. Use the "TEST" button to check that the rcd is

Wear protective equipment including ear defenders and goggles.

- 1.
- 2 The breaker should not be switched on until the tool is on the work surface. It should not be switched on if the tool has no load.

For guidance on managing

construction health risks go to

www.hse.gov.uk/construction

Using the Breaker

- Keep the cable clear of the tool bit and any sharp edges on the work. 3.
- 4. Watch out for signs that vibration may be affecting the hands. If fingers start to tingle or feel numb operators should take a short break from using the machine.
- Fingers should be exercised to encourage blood flow. 5.
- To help prevent vibration affecting the hands, the machine should be operated for shorter periods. Hands should be kept warm - wearing gloves may help to do
- this.
- If operators think the cable may be cut or damaged in any way, the machine must 6.
- be switched off and unplugged before inspecting it.
- Care should be taken not to accidentally pull the plug from the socket. 7.
- 8. Switch off and remove the plug from the socket before leaving the breaker
- unattended.
- 9.
 - If the equipment does not work properly do not attempt to repair it. Contact the
 - hire company.

Please keep this leaflet safely as it may be required for reference at a future date

1.

2.

3.

5.

6.

7. 8.

1

care.

safely

Dust mask

Safety boots

Ear muffs

Gloves

appropriate tools.

Impact resistant goggles



If operators have not used a breaker before, they should familiarize themselves with the

The work should be planned ahead and thought out to make sure that it will be carried out

This machine must not be used by minors, or by anyone under the influence of drugs or alcohol.

This breaker is designed for operation by an able bodied adult. Anyone with either

The following items of personal protective equipment must be worn as a minimum:

Heavy Breaker

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

0505 Safety Guidance

This heavy duty breaker is designed for breaking up roadwork,

concrete and asphalt surfaces; and compacting, using the

The action of this breaker can cause injury or damage if the

machine on some straightforward work before starting on the main task.

temporary or permanent disability must seek expert advice before using it.

effort has been made by HAE/EHA to ensure that the information given in this docum

machine is not used in a careful and controlled way.

HEAVY BREAKER



FTH HIRE GROUP

v.122016